



# Simple Instructions for Alarm Systems

**Alarm System:**  
Caddx 8980

**Keypads:**  
9050 LCD



## To Arm and Leave:

Enter 4-digit code

## To Arm and Stay Inside with Delay:

1. Press "\*"
2. Enter zone number(s) of motion detectors
3. Press "\*"
4. Enter 4-digit code

## To Silence Alarm:

Enter 4-digit code

## To Acknowledge System Trouble (to stop beeping):

Enter 4-digit code

## To Change User Codes:

1. Press "C" + user number
2. Enter master code
3. Enter new code
4. Press "#"

## To Disarm System:

Enter 4-digit code

## To Arm and Stay Inside with NO Delay:

1. Press "\*"
2. Enter zone number(s) of motion detectors
3. Press "\*"
4. Enter 4-digit code
5. Press "\*"

## To Clear Alarm Memory:

Press "#"

## To Bypass a Zone:

1. Press "\*"
2. Enter zone number(s) to be bypassed
3. Press "\*"