



Simple Instructions for Alarm Systems

Alarm System:
Caddx 8980E

Keypads:
9050 LCD



To Arm and Leave:

Enter 4-digit code

To Arm and Stay Inside with Delay:

1. Press "*"
2. Enter zone number(s) of motion detectors
3. Press "*"
4. Enter 4-digit code

To Silence Alarm:

Enter 4-digit code

To Acknowledge System Trouble (to stop beeping):

Enter 4-digit code

To Change User Codes:

1. Press "C" + user number
2. Enter master code
3. Enter new code
4. Press "#"

To Disarm System:

Enter 4-digit code

To Arm and Stay Inside with NO Delay:

1. Press "*"
2. Enter zone number(s) of motion detectors
3. Press "*"
4. Enter 4-digit code
5. Press "*"

To Clear Alarm Memory:

Press "#"

To Bypass a Zone:

1. Press "*"
2. Enter zone number(s) to be bypassed
3. Press "*"