



Simple Instructions for Alarm Systems

Alarm System:
FBI XL-4600

Keypads:
4600RM, 4600SM



To Arm and Leave:

Enter 4-digit code

To Arm and Stay Inside with Delay:

Press "Stay", enter 4-digit code

To Silence Alarm:

Enter 4-digit code

To Acknowledge System Trouble (to stop beeping):

Enter 4-digit code

To Change User Codes:

1. Press "Code"
2. Enter 4-digit master code
3. Enter user number
4. Enter new code

To Disarm System:

Enter 4-digit code

To Arm and Stay Inside with NO Delay:

Press "Stay", press "Instant", enter 4-digit code

To Clear Alarm Memory:

Enter 4-digit code

To Bypass a Zone:

1. Press "Bypass"
2. Enter 4-digit code
3. Enter zone number (1-6)