



Simple Instructions for Alarm Systems

Alarm System:
GE Network NX-8



Keypads:
148E LCD, 1192E LCD

To Arm and Leave:

Press "Exit" OR enter 4-digit code

To Arm and Stay Inside with Delay:

Press "Stay" OR enter 4-digit code and press "Stay"

To Silence Alarm:

Enter 4-digit code

To Acknowledge System Trouble (to stop beeping):

Enter 4-digit code

To Change User Codes:

1. Press "*" "5"
2. Enter master code
3. Enter 2-digit ID (01, 02, 03, etc.)
4. Enter new code
5. Press "#"

To Disarm System:

Enter 4-digit code

To Arm and Stay Inside with NO Delay:

Press "Stay" twice OR enter 4-digit code and press "Stay" twice

To Clear Alarm Memory:

Press "#"

To Bypass a Zone:

1. Press "*" "