



# Simple Instructions for Alarm Systems

**Alarm System:**  
Ademco Vista 10 SE

**ADEMCO**

**Keypads:**  
6127, 6137 Fixed Word, 6139 Alpha

**To Arm and Leave:**

Enter code, press "2" "Away"

**To Arm and Stay Inside with Delay:**

Enter code, press "3" "Stay"

**To Silence Alarm:**

Enter code, press "1" "Off"

**To Acknowledge System Trouble (to stop beeping):**

Enter code, press "1" "Off"

**To Change User Codes:**

1. Enter master code
2. Press "8"
3. Enter user number (2-6)
4. Enter new code

**To Disarm System:**

Enter code, press "1" "Off"

**To Arm and Stay Inside with NO Delay:**

Enter code, press "4" "Instant"

**To Clear Alarm Memory:**

Enter code, press "1" "Off"

**To Bypass a Zone:**

Enter code, press "6", enter 2-digit zone number

**To Change Master Code:**

1. Enter master code
2. Press "8" "Enter" "2"
3. Enter new master code (twice)